


English

Pager 901

Manual Programming Instructions

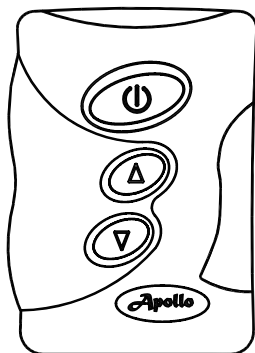

Manual Programming

SPET1

Move out the Battery first, Press and Hold "▲"

SPET2

Insert Battery, wait about 5 seconds until display is on and shows "Password 0000" on the display, use "▲" button to change the figures and "▼" to move positions, or remain the password, then press "⏻" to show "Frequency".

SPET3

• FREQUENCY

Displaying "Frequency xxx.xxx", use "▲" button to change the figures and "▼" to move positions. Then pressing "⏻" to confirm.

Manual Programming

• CAPCODE

Set up capcod, use "▲" button to change the figures and "▼" to move positions, when you complete setting up each capcode, please also press "⏻" button to set up the next capcode. Use "▲" button to choose "ON" or "--"(OFF).

- 1.xxxxxxx ON
- 2.xxxxxxx ON (or--)
- 3.xxxxxxx ON (or--)
- 4.xxxxxxx ON (or--)

When you complete setting up 4 capcodes, please also press "⏻" key for next step.

• BAUD

Can be changed baud rate between 512, 1200 or 2400 by pressing "▲", Finish by pressing "⏻" button.

Manual Programming

- **MODIFY PASSWORD**

Can be changed password by pressing "▲", then confirm by "⏻".

- **PASS**

When pass shows, it means program is done. Remove battery to turn on pager.

Make sure to read this manual before using the machine. Please keep it in hand for future reference.