

USER MANUAL

• **Alpha-Numeric Display Pager** •

MODEL : AL-A27 / AF-A27

Control Buttons	1
Features and Functions	2-3
Battery Door Cover	4
LCD Display	5
Function Operation.....	6-21
Reading a Message	6
Locking Message	7
Unlocking Message	8
Deleting Message	9
Deleting All Message	10
Move to Message Memo	11
Setting Alert	12
Pager On / Off	14
Setting Auto Sleep	15
Setting Alarm	16
Setting Time And Date	17
Setting Scroll	18
Setting Zoom In Or Zoom Out	20
Reading Mail Drop	21
Moving The Cursor	22
Reading Personal Message	23
Reading Full Message	24
Backlight / Duplicate	25
Error Message / Battery Gauge	26
Set Mail Drop Alert	27
Set Mail Drop History	28
Desk charger (Option)	29

Control Buttons

MODEL:AL-A27/AF-A27



Select Button

Function Button

Read Button

⌚ Read Button

- to read message
- to turn on back-light
- to turn on power
- to activate the function

◀ ▶ Select Button

- to move the cursor
- to preview message by cycles

|| Function Button

- to display the function menu
- to adjust the time and date change
- to enable the function mode
- to move cursor to general or mail drop area

Features and Functions

- ♦ Water-Proof , Dust-Proof
- ♦ Desk charger (option)
- ♦ 4-Line , 84 English Alpha Character Memory
- ♦ Easy-To-Read Back-Lit Display
- ♦ Up To Memory Capacity 259,056 Characters.
- ♦ 16 Memory Slots + Message Full 10 sets
- ♦ Personal Message Memory : 20 sets , Mail Drop Available
- ♦ Show Time Of Day And Date
- ♦ User Selectable 12 / 24 Hour Clock
- ♦ Message Date And Time Stamping
- ♦ Incomplete Message-In Indication
- ♦ Duplicate Message Indicator
- ♦ Locks Important Message (Up To 10 Sets)
- ♦ All Or Individual Message Delete
- ♦ Unread Message Indicator , Reminder Alert

 
- ♦ Low Battery Alert , Low Battery Indicator
- ♦ Zoom The Display - To Enlarge Message For Easy Read Ability
- ♦ Message Full Indication , Message Full Auto Storage
- ♦ Message Preview For A Quick Look At Each Message
- ♦ Message Move to Memo (User selectable)
- ♦ Service Area Indication
- ♦ 5 Built-In Alarm Clock
- ♦ 4 Beep Alerts / Silent Vibration / Silent then Beep / 8 Musical / Sleep Mode
- ♦ Private Time - For The Ability To Turn Off All Pager Alerts During Pre-Selected Times
- ♦ Mail Drop Alerts
- ♦ Save Message When Off And When Changing Battery

Battery Door Cover



- ◇ The battery door cover is screwed to the rear cover tightly for water/dust-proof.
- ◇ Please refer to the picture to open and remove the battery door cover to insert or take out the rechargeable battery.
- ◇ Please be aware that a rechargeable battery is a must when the charger is used to recharge the battery.
- ◇ Please don't use the alkaline battery with A27 charger to avoid dangerous accidents.

LCD Display



Pager Status Symbols

- POWER ON INDICATOR
- MUSIC ALERT
- BEEP ALERT
- AUTO SLEEP INDICATOR
- ALARM INDICATOR
- AUTO SCROLL INDICATOR
- BATTERY CAPACITY
- OUT OF RANGE INDICATOR
- ERROR MESSAGE
- DUPLICATE MESSAGE
- MAIL DROP MESSAGE
- MEMO MESSAGE INDICATOR

Message Status Symbols

 
 
- MESSAGE IN MEMORY
- MESSAGE SELECTING
- MESSAGE LOCK IN MEMORY
- MESSAGE LOCK SELECTING
- PERSONAL MESSAGE
- FULL MESSAGE
- PERSONAL MESSAGE SELECTING
- FULL MESSAGE SELECTING
- MAILDROP IN MEMORY
- MAILDROP SELECTING
- DUPLICATE MESSAGE

Function Menu Symbols

- UP OR ESCAPE
- SET ALERT
- PAGER OFF
- SET AUTO SLEEP
- SET ALARM
- SET TIME
- SET SCROLL
- ZOOM IN / ZOOM OUT
- MESSAGE LOCK
- MESSAGE DELETE
- DELETE ALL
- MOVE TO MEMO
- MAIL DROP ALERT
- SET HISTORY



Receiving And Reading Your Message

- * A flashing ▲ symbol indicates you have a message has not been read.(The symbol ▼ of mail drop shows on screen by flashing).
- * Press ◀ or ▶ , to preview the message.
- * Press Ⓢ , to display your message.,Press Ⓢ again, to view the next screen.
- ★ If you have set " Auto Scroll " , your pager will scroll through your message screen by screen automatically .






Locking Messages

  - * Press ◀ or ▶ , to move the cursor to the desired flashing symbol  .
- * Press  , press ◀ or ▶ to select the desired message to lock.
- * Press  , to lock the message. .
- * The symbol  is displayed , indicating the status of the message in memory.



Unlocking Messages

   - * Press ◀ or ▶ , to move the cursor to select the message to unlock.
- * Press ■■ , then , press ◀ or ▶ , to " MESSAGE UNLOCK " Mode.
- * Press ■■ , to unlock the message.



Deleting Messages

- * Press ◀ or ▶ , to move the cursor to select the message you desire. Press ⓘ to read the message.
- * Press ■■ , press ◀ or ▶ , to display " MESSAGE DELETE " Mode.
- * When " MESSAGE DELETE ? " is displayed on the screen , press ▶ to delete the message.

⊙ 05:Pls Call818-123456
 ◀ 7,Divid.
 [1]12:30 PM 4/12

⊙ 05:Pls Call818-123456
 ◀ 7,Divid.
 MESSAGE DELETE
 ↑ ■ ■ ■



⊙ 05:Pls Call818-123456
 ◀ 7,Divid.
 MESSAGE DELETE ?

⊙ ▲▲▲▲ ■▲■▲▲▲▲▲▲■ ■大
 ◀ ■■■■■■■■ ■
 12:35 PM 4/15/98

Deleting All Messages




(All unlocked and read messages)

- * Press **||** , press **◀** or **▶** , to "DELETE ALL" Mode .
- * When "DELETE ALL ?" is displayed , Press **▶** , all unlocked and read messages are deleted.

  




Move Message To Memo

   - * Press ◀ or ▶ , to move the cursor to the desired storing message. Press ⓘ to read the message.
- * Press ⏏ , and press ▶ once, to move to " MOVE TO MEMO "
- * Press ⏏ , to move the flashing icon message automatically into your memo mail .






Setting Alert

   - * Press **II** , then , press **◀** or **▶** once to display " SET ALERT " Mode .
- * Press **II** , to enable "SET ALERT".
- * Press **II** , to move the cursor to the desired alarm mode .(Alert  / Musical  / Vibration  / Sleep  are optional)
- * Press **◀** or **▶** , to move to the cursor to the desired tone or music .
- * Press **⏸** setting the alert is completed.





Setting Alert

   - * The  or  symbol is displayed if the message receiver is in the audible or musical mode .
- * The  or  symbol won't display on screen if the receiver is in the silent mode or sleep mode.







Turning Your Pager Off

  - * Press **II** , then , press **◀** or **▶** , to " PAGER OFF " mode.
- * Press **II** , till " PAGER OFF ? " appears on the screen.
- * Press **▶** , to turn the pager off .
- * After turning your pager off , the screen is empty.
- * Press **⓪** , to turn the pager power on.






Setting Auto Sleep

- * Press **||** , then, press **◀** or **▶** to display " Auto Sleep " mode.
- * Press **||** , to enable " Auto Sleep Set " Mode.
- * Press **||** , to select "open" or "close" (symbol **⌋** or **-**) and adjust the digits, press **◀** or **▶** for moving the cursor.
- * Press **Ⓢ** setting auto sleep mode is completed. The screen returns to stand-by status.
- * **⌋** is displayed when the Auto Sleep mode is set.
- * The enable **zZ** symbol indicates your pager is during setting status.

    





Setting Alarm (5 alarms)

- * Press **||** , then , press **◀** or **▶** to "SET ALARM "Mode.
- * Press **||** , to enable.
- * Press **◀** or **▶** , to move the cursor.
- * Press **||** , to set the alarm status either alarm enabled , alarm disabled or set time.
- * Press **①** setting the alarm is completed.

   


Setting Time And Date

- * Press **||** , then , press **◀** or **▶** once until "SET TIME " Mode is displayed.
- * Press **||** , to enable set time.
- * Press **◀** or **▶** , to move the cursor to the hour / minute digit .Then press **||** to adjust each set of digits : AM/ PM/24 hr / month / day.
- * Press **Ⓢ** to activate the time and date change.

    


Setting Scroll

- * Press **||** , then , press **◀** or **▶** , to " SET SCROLL " Mode .
- * Press **||** , to enable scroll automatically.
- * Press **||** , to select the scroll speed.
- *
 - (1) **■** -- slow.
 - (2) **■ ■** -- normal.
 - (3) **■ ■ ■** -- rapid.
 - (4) **X** -- off

 






Setting Scroll

 - * Press ► to activate the function.
- * When the Auto scroll is set, the ◀▶ symbol is displayed on screen.






Setting Zoom In / Zoom Out

- * Press **||** ,then press **◀** or **▶** , to "ZOOM IN".(symble ), Then, press **||** to confirm..
- * The letters on screen enlarge and become two lines to read.
- * Or press **◀** or **▶** to move the cursor again to " ZOOM OUT " (symble ), and press **||** to complete.
- * The letters on screen change to four lines to read.

     



Moving the Cursor

   - * Press ◀ or ▶ to move cursor to the  icon flashes, indicating the present position of the message you are going to read.
- * Press **II**, the screen shows "UP OR ESCAPE".
- * Press **II** once, the flashing icon can be move to the top row or the second row.,such like "MAIL DROP AREA" or "MESSAGE AREA".
- * Press **II**, the pager returns to standby mode.





Reading Personal Message

  - * Press ◀ or ▶ , to move the flashing icon to the 𐄂 symbol.
- * Press ① , to read message.
- * When the 𐄂 symbol is shown in the top left-hand corner of the display , indicates the message status as a personal message.



Reading Full Message

  - * Press ◀ or ▶ , to move the flashing icon to the M symbol.
- * Press (1) , to read message.
- * When the M symbol is shown in the top left-hand corner of the display , indicates the message status as a full message.




Backlighting

You can manually activate the back-lit at any time by pressing and holding  for three seconds . If no other buttons are pressed, the back-lit automatically turns off when the pager returns to the standby mode .

Duplicate Message


The pager automatically covers by the latest messages if it is received the same message.

 The  symbol is shown in the top left-hand corner of the display , indicates the message status as a "Duplicate Message".





Error Message

 If it is received the error message. The  symbol is shown in the top left-hand corner of the display, indicates the message status as a Error message.





Battery Gauge

  The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range from  (full),  (1/2),  (low). Whenever the low battery shows on display, Please replace the new battery in to make sure the pager is in receivable condition.




Set Mail Drop Alert

- * To move the cursor to the Mail Drop.
- * Press **||** , to display the function menu.
- * Press **◀** or **▶** , to move the cursor to set mail drop alert (**♪**).
- * Press **||** , to activate the function . Or press **⏏** , to exit the function .

  

Set Mail Drop History


- * The user could select how many sets they want under "Mail Drop" cursor.
- * Move the cursor to "MAIL DROP AREA".
- * Press **||** then press **▶** to the "SET HISTORY"
- * Press **||** to into select "Sets".
- * Press **◀** or **▶** to move the "▲". When you move the "▲" to under "5", it means you select 5 sets under this cursor. Move to "8", means 8 sets.
- * Press **||** to confirm your setting.

 

Desk Charger (Option)



 - ◇ Please don't use the alkaline battery with A27 charger to avoid dangerous accidents.
- ◇ The A27 charger has built with a buzzer, when the A27 is in the charger and paged, the beeping sound comes out from the buzzer built-in the charger.



762-00033-0